


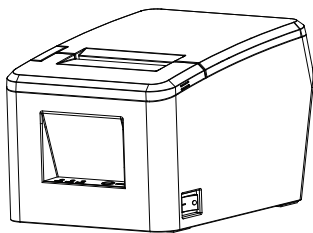


Quick Start Guide

TP40



 Packing List



Printer



 
USB Cable



Power Cord



Power Adapter




Serial Cable



Quick Start Guide



 CD




Paper Roll

⚠Notes:


- 1. The packing materials are actually depend on the order.
- 2. The power adapter and power cord vary by local or region.

Appearance


■ Front

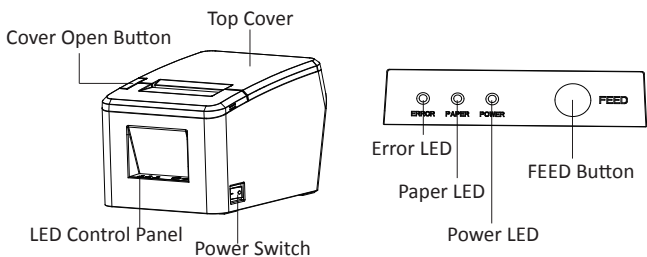

■ Back

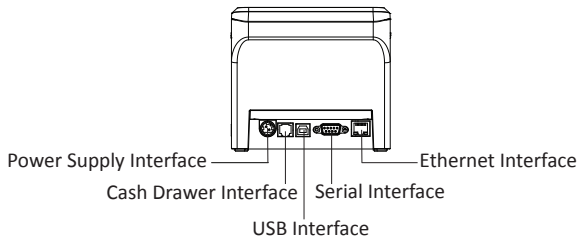


■ Opening Top Cover


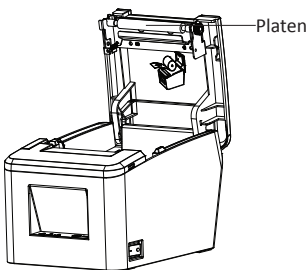


Paper Loading

- 1. Press the cover open button to open the top cover.
- 2. Remove the used roll paper core, if any.

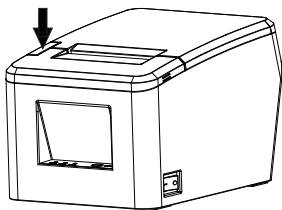


 - 3. Install the roll paper in the correct direction of the roll paper.

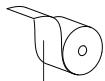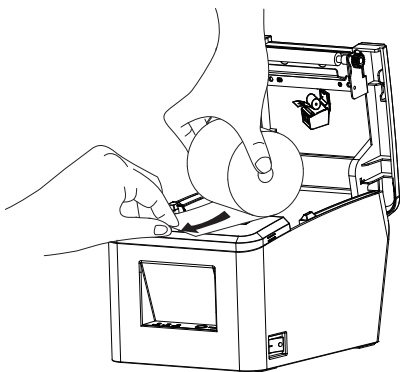


Thermosensitive Layer

3. Pull out some roll paper, and close the top cover.

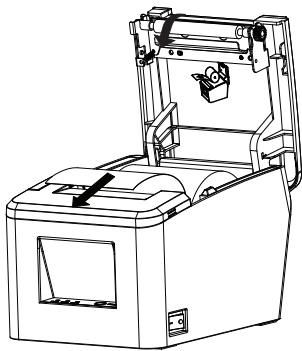


4. Tear the extra paper of the printer.

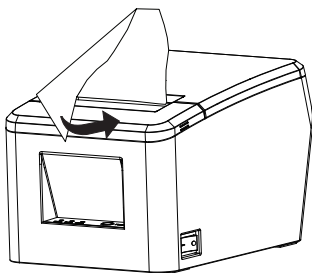


Power Supply

 1. Make sure the printer power is turn off.
2. Connect power adapter to printer.
3. Connect power adapter to power cord.
4. Plug the other side of power cord into the socket outlet.

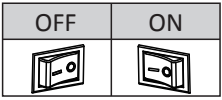

1

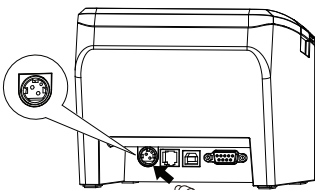

2

Power Adapter

3



4



 
Power Cord

Interface

1





2

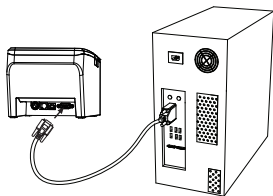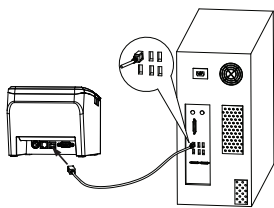

3





4

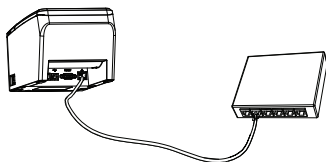
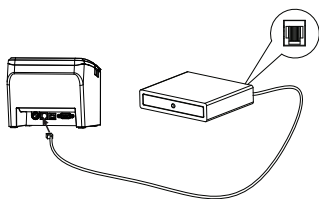


Remove Jammed Paper

1. When a paper jammed, do not press the cover open button to avoid damaging the blade.
2. Fix the printer by one hand and press either side of the convex bars by the other hand. Push up and open the front cover.

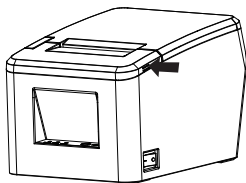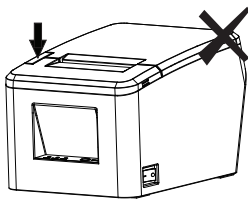


3. Please rotate the gear until the blade returns to its normal position, as shown in Figure 2.

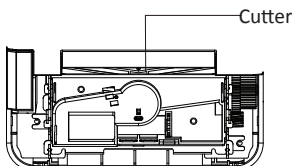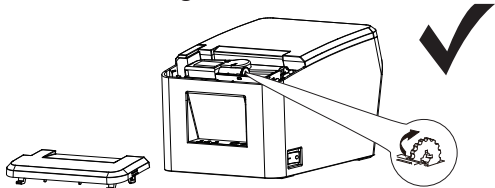

When cutter jammed, the cutter does not retreat back and can be seen.

Figure 1

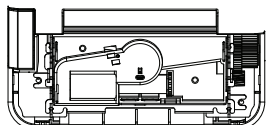

Cutter retreats back totally and cannot be seen.

Figure 2